



KEY NO	PARTS NAME
No.1	Retainer
No.2	Washer
No.3	Bush
No.4	Level Wind Assembly
No.5	Level Wind Pin
No.6	Washer
No.7	Nut
No.8	Pipe
No.9	Worm Shaft
No.10	Washer
No.11	Worm Pinion
No.12	Front Cover
No.13	Palm Side Cover
No.14	Screw
No.15	Control Box Assembly
No.16	Washer
No.17	Ball Bearing
No.18	Ring
No.19	Brake Shoe
No.20	Spool Assembly(1 Ball Bearing)
No.21	Screw
No.22	Screw
No.23	Frame
No.24	Tap Screw
No.25	Pillar
No.26	Thume Bar

KEY NO	PARTS NAME
No.27	Spring
No.28	Kick Lever
No.29	Spring
No.30	Screw
No.31	Clutch Cam
No.32	Screw
No.33	Return Lever
No.34	Clutch
No.35	Coil Spring
No.36	Pinion
No.37	Ring
No.38	Ball Bearing
No.39	Gear Side Cover
No.40	Long Screw
No.41	Line Stopper
No.42	O-Ring
No.43	Washer
No.44	Collar
No.45	Washer
No.46	Nut
No.47	Screw
No.48	Ball Bearing
No.49	Retainer
No.50	Bearing Plate
No.51	Washer
No.52	Screw

KEY NO	PARTS NAME
No.53	Gear Metal
No.54	Gear
No.55	Ratchet
No.56	Washer
No.57	Drive Gear
No.58	Washer-L
No.59	Washer-D
No.60	Bush
No.61	O/Way Clutch Assembly
No.62	Ball Bearing
No.63	Washer
No.64	Leaf Spring Assembly
No.65	Spring Washer
No.66	Washer
No.67	Star Drag
No.68	Washer
No.69	Handle Assembly
No.70	Washer
No.71	Handle Knob Assembly
No.72	Bush
No.73	Screw
No.74	Handle Knob Cap
No.75	Washer
No.76	Nut
No.77	Retainer
No.78	Screw