


KEY NO	PARTS NAME
No.1	Palm Side Cover
No.2	Coil Spring
No.3	Pin
No.4	Lock Lever
No.5	Spool Cover ASSY
No.6	Washer
No.7	Plate
No.8	Tap Screw
No.9	Washer
No.10	Ball Bearing
No.11	Ring
No.12	Spool ASSY(1BB)
No.13	Coil Spring
No.14	Front Support
No.15	Screw
No.16	Screw
No.17	Nut
No.18	Washer
No.19	Level Wind Pin
No.20	Retainer
No.21	Bush
No.22	
No.23	Level Wind ASSY
No.24	Pipe
No.25	Worm Shaft
No.26	
No.27	Washer
No.28	Worm Pinion
No.29	Retainer
No.30	Screw
No.31	Frame ASSY
No.32	Thumb Bar
No.33	Screw
No.34	Retainer
No.35	Line Memory Knob

KEY NO	PARTS NAME
No.36	Click Spring
No.37	Screw
No.38	Spring
No.39	Tap Screw
No.40	Clutch Cam
No.41	Cam Plate
No.42	Clutch Link
No.43	Tap Screw
No.44	Spring
No.45	Kick Lever
No.46	Clutch
No.47	Coil Spring
No.48	Pinion
No.49	Ring
No.50	Ball Bearing
No.51	Ⓜ Gear Side Cover ASSY
No.52	
No.53	Coil Spring
No.54	Click Pin
No.55	O-Ring
No.56	Click Plate
No.57	Retainer
No.58	Ring
No.59	Control Plate
No.60	Tension Shaft
No.61	Washer
No.62	Tension Knob
No.63	Ball Bearing
No.64	Retainer
No.65	Bearing Plate
No.66	Washer
No.67	Screw
No.68	Gear Metal
No.69	Gear
No.70	Ratchet

KEY NO	PARTS NAME
No.71	Washer
No.72	Drive Gear
No.73	Washer-L
No.74	Washer-D
No.75	Washer-A
No.76	Washer-D
No.77	Sleeve
No.78	Ⓜ One Way Clutch
No.79	Washer
No.80	
No.81	Spring Washer
No.82	
No.83	Drag Nut
No.84	Coil Spring
No.85	Star Drag ASSY
No.86	Coil Spring
No.87	Click Pin
No.88	Click Plate
No.89	Adaptor
No.90	Handle Arm ASSY
No.91	Washer
No.92	Handle Knob ASSY
No.93	Screw
No.94	Handle Knob Cap
No.95	
No.96	Nut
No.97	Retainer
No.98	Screw
No.99	Ⓜ Handle ASSY
No.100	Bush
No.101	Washer-L
No.102	Click Holder ASSY
No.103	O-Ring
No.104	Ⓜ Palm Side Cover ASSY
No.105	Ⓜ Tension Knob ASSY

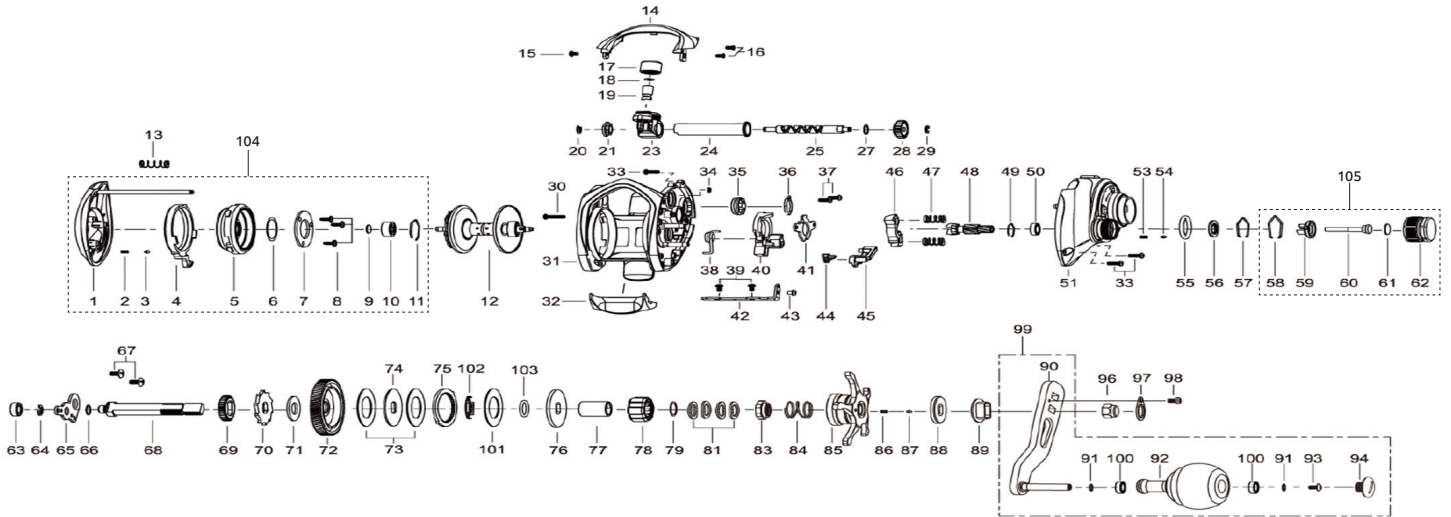

KEY NO	PARTS NAME
No.1	Palm Side Cover
No.2	Coil Spring
No.3	Pin
No.4	Lock Lever
No.5	Spool Cover ASSY
No.6	Washer
No.7	Plate
No.8	Tap Screw
No.9	Washer
No.10	Ball Bearing
No.11	Ring
No.12	Spool ASSY(1BB)
No.13	Coil Spring
No.14	Front Support
No.15	Screw
No.16	Screw
No.17	Nut
No.18	Washer
No.19	Level Wind Pin
No.20	Retainer
No.21	Bush
No.22	
No.23	Level Wind ASSY
No.24	Pipe
No.25	Worm Shaft
No.26	
No.27	Washer
No.28	Worm Pinion
No.29	Retainer
No.30	Screw
No.31	Frame ASSY
No.32	Thumb Bar
No.33	Screw
No.34	Retainer
No.35	Line Memory Knob

KEY NO	PARTS NAME
No.36	Click Spring
No.37	Screw
No.38	Spring
No.39	Tap Screw
No.40	Clutch Cam
No.41	Cam Plate
No.42	Clutch Link
No.43	Tap Screw
No.44	Spring
No.45	Kick Lever
No.46	Clutch
No.47	Coil Spring
No.48	Pinion
No.49	Ring
No.50	Ball Bearing
No.51	② Gear Side Cover ASSY
No.52	
No.53	Coil Spring
No.54	Click Pin
No.55	O-Ring
No.56	Click Plate
No.57	Retainer
No.58	Ring
No.59	Control Plate
No.60	Tension Shaft
No.61	Washer
No.62	Tension Knob
No.63	Ball Bearing
No.64	Retainer
No.65	Bearing Plate
No.66	Washer
No.67	Screw
No.68	Gear Metal
No.69	Gear
No.70	Ratchet

KEY NO	PARTS NAME
No.71	Washer
No.72	Drive Gear
No.73	Washer-L
No.74	Washer-D
No.75	Washer-A
No.76	Washer-D
No.77	Sleeve
No.78	② One Way Clutch
No.79	Washer
No.80	
No.81	Spring Washer
No.82	
No.83	Drag Nut
No.84	Coil Spring
No.85	Star Drag ASSY
No.86	Coil Spring
No.87	Click Pin
No.88	Click Plate
No.89	Adaptor
No.90	Handle Arm ASSY
No.91	Washer
No.92	Handle Knob ASSY
No.93	Screw
No.94	Handle Knob Cap
No.95	
No.96	Nut
No.97	Retainer
No.98	Screw
No.99	③ Handle ASSY
No.100	Bush
No.101	Washer-L
No.102	Click Holder ASSY
No.103	O-Ring
No.104	① Palm Side Cover ASSY
No.105	④ Tension Knob ASSY