





tailwalk

SPEAKY
3000 / 3500 HGX

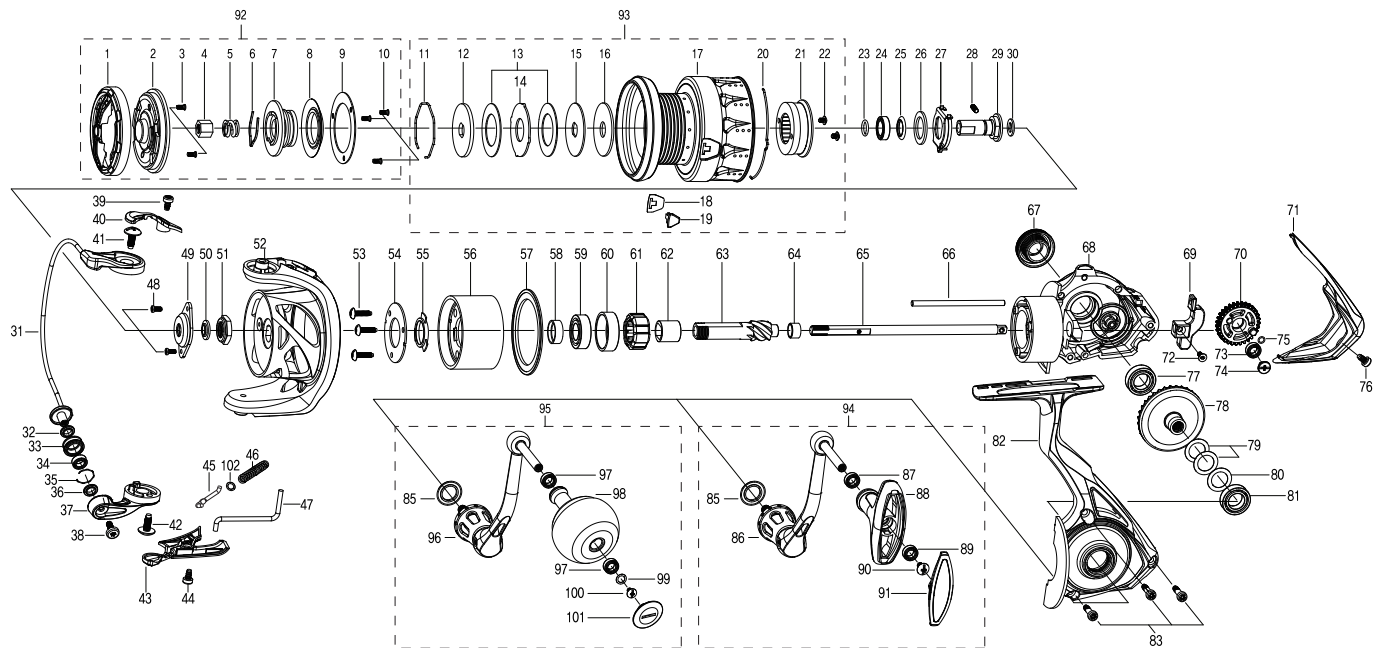

KEY NO	Parts Name	KEY NO	Parts Name	KEY NO	Parts Name
1	DRAG KNOB-A	41	TAP SCREW	81	BALL BEARING
2	DRAG KNOB-B	42	TAP SCREW	82	BODY COVER ASSY
3	SCREW	43	ROTOR COVER -A	83	TAP SCREW
4	NUT	44	TAP SCREW		
5	SPRING	45	LINK	85	WATERTIGHT WASHER
6	LEAF SPRING	46	COIL SPRING	86	HANDLE ARM ASSY
7	CAP	47	KICK LEVER	87	BUSH
8	WATERTIGHT WASHER	48	TAP SCREW	88	HANDLE KNOB
9	PLATE	49	LOCK CAP	89	BUSH
10	SCREW	50	WATERTIGHT WASHER	90	SCREW
11	RING	51	NUT	91	HANDLE KNOB CAP ASSY
12	WASHER-D	52	ROTOR	92	DRAG KNOB ASSY
13	WASHER-L	53	SCREW	93	SPOOL ASSY
14	WASHER-A	54	PLATE	94	HANDLE ASSY
15	WASHER-D	55	WATERTIGHT WASHER		
16	WASHER-L	56	CAP	102	WASHER
17	SPOOL	57	ROTOR BRAKE	SPEAKY 3500 HGX	
18	PLATE	58	COLLAR		
19	LINE CLIP	59	BALL BEARING		
20	SPRING	60	BEARING HOLDER		
21	CLICK CUP	61	ONE WAY CLUTCH		
22	SCREW	62	SLEEVE	17	SPOOL
23	O-RING	63	PINION	31	BAIL ASSY
24	BALL BEARING	64	BUSH	47	KICK LEVER
25	WATERTIGHT WASHER	65	MAIN SHAFT	52	ROTOR
26	WASHER	66	PILLAR	93	SPOOL ASSY
27	LEAF SPRING ASSY	67	HANDLE CAP	95	HANDLE ASSY
28	SET SCREW	68	BODY ASSY	96	HANDLE ARM ASSY
29	SPOOL METAL	69	O/S SLIDER	97	BUSH
30	WASHER	70	O/S GEAR	98	HANDLE KNOB ASY
31	BAIL ASSY	71	REAR CAP	99	WASHER
32	BUSH	72	SCREW	100	SCREW
33	LINE ROLLER	73	BALL BEARING	101	HANDLE KNOB CAP
34	BALL BEARING	74	TAP SCREW		
35	RING	75	O-RING		
36	BUSH	76	TAP SCREW		
37	ARM LEVER	77	BALL BEARING		
38	TORX SCREW	78	DRIVE GEAR		
39	TAP SCREW	79	WASHER		
40	ROTOR COVER -B	80	WASHER		

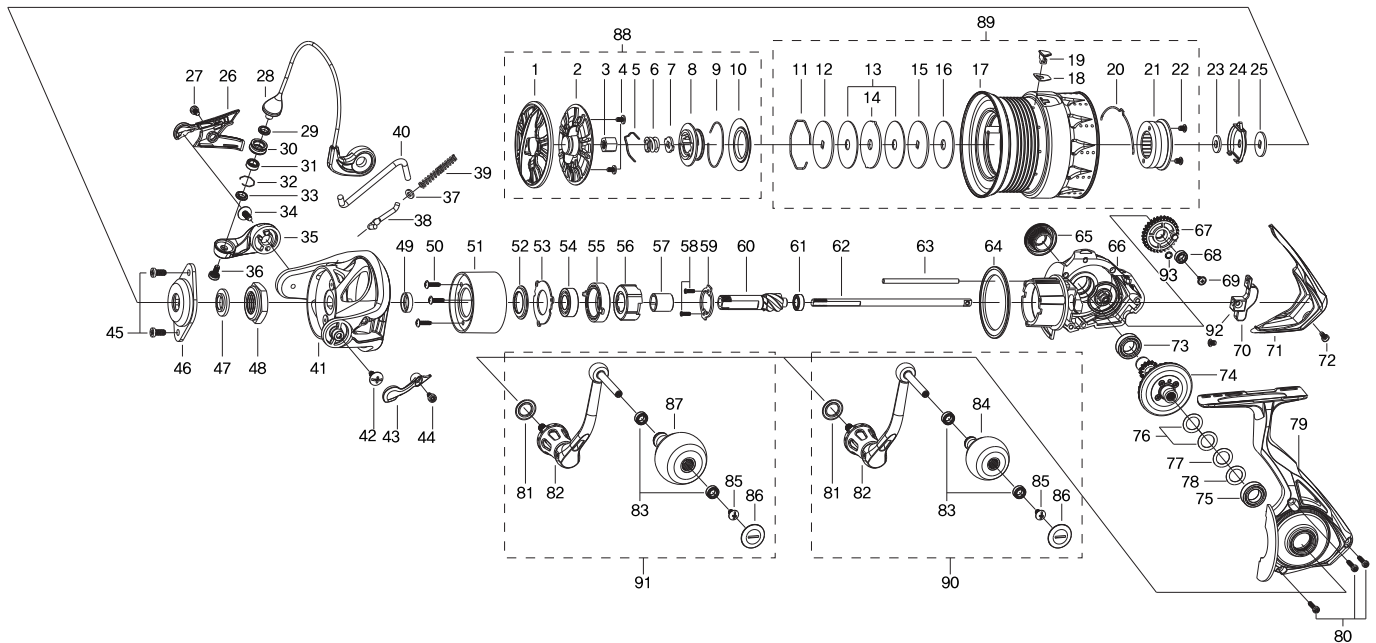

KEY NO	Parts Name	KEY NO	Parts Name	KEY NO	Parts Name
1	DRAG KNOB-A	41	ROTOR	81	WATERTIGHT WASHER
2	DRAG KNOB-B	42	TAP SCREW	82	HANDLE ARM ASSY
3	NUT	43	ROTOR COVER -B	83	BUSH
4	TAP SCREW	44	TAP SCREW	84	HANDLE KNOB ASSY
5	LEAF SPRING	45	TAP SCREW	85	SCREW
6	SPRING	46	LOCK CAP	86	HANDLE KNOB CAP
7	PLATE	47	WATERTIGHT WASHER		
8	DRAG CAP	48	NUT	88	DRAG KNOB ASSY
9	RETAINER	49	COLLAR	89	SPOOL ASSY
10	WATERTIGHT WASHER	50	TAP SCREW	90	HANDLE ASSY
11	RING	51	CAP		
12	WASHER-D	52	WATERTIGHT WASHER	92	SCREW
13	WASHER	53	BEARING PLATE	93	O-RING
14	WASHER-A	54	BALL BEARING	SPEAKY 3500 S XGX	
15	WASHER-D	55	BEARING HOLDER		
16	WASHER	56	O/WAY CLUTCH	17	SPOOL
17	SPOOL	57	SLEEVE	28	BAIL ASSY
18	PLATE	58	TAP SCREW	40	KICK LEVER
19	LINECLIP	59	PLATE	41	ROTOR
20	SPRING	60	PINION	79	BODY COVER ASSY
21	CLICK CUP	61	BALL BEARING	87	HANDLE KNOB ASSY
22	SCREW	62	MAIN SHAFT	89	SPOOL ASSY
23	WASHER	63	PILLAR	91	HANDLE ASSY
24	LEAF SPRING ASSY	64	ROTOR BRAKE		
25	WASHER	65	HANDLE CAP		
26	ROTOR COVER -A	66	BODY ASSY		
27	TAP SCREW	67	O/S GEAR		
28	BAIL ASSY	68	BALL BEARING		
29	BUSH	69	TAP SCREW		
30	LINE ROLLER	70	O/S SLIDER		
31	BALL BEARING	71	REAR CAP		
32	RING	72	TAP SCREW		
33	BUSH	73	BALL BEARING		
34	TAP SCREW	74	DRIVE GEAR		
35	ARM LEVER	75	BALL BEARING		
36	TORX SCREW	76	WASHER		
37	WASHER	77	WASHER		
38	LINK	78	WASHER		
39	COIL SPRING	79	BODY COVER ASSY		
40	KICK LEVER	80	TAP SCREW		