


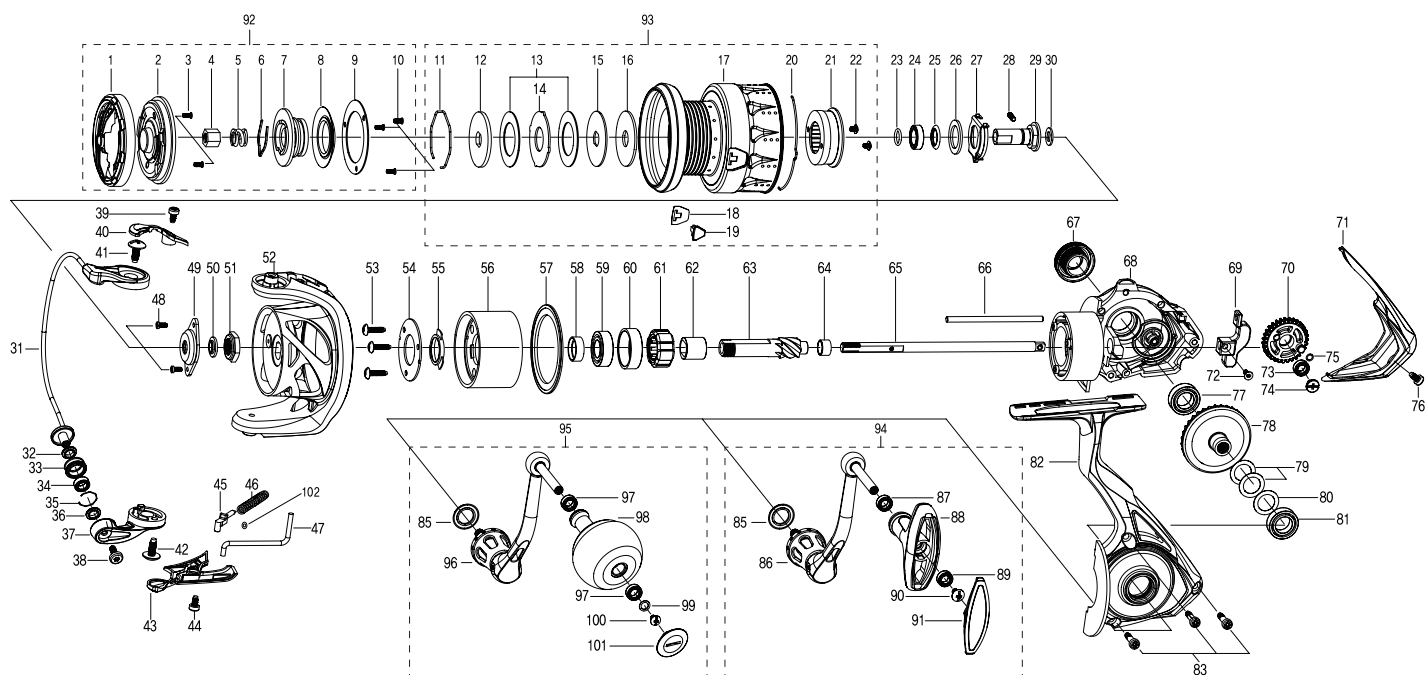

KEY NO	PARTS NAME
1	DRAG KNOB-A
2	DRAG KNOB-B
3	SCREW
4	NUT
5	SPRING
6	LEAF SPRING
7	DRAG KNOB CAP
8	WATERTIGHT WASHER
9	PLATE
10	SCREW
11	RING
12	WASHER-D2
13	WASHER-L
14	WASHER-A
15	WASHER-D1
16	WASHER-L
17	SPOOL
18	PLATE
19	LINE CLIP
20	SPRING
21	CLICK CUP
22	SCREW
23	O-RING
24	BALL BEARING
25	WATERTIGHT WASHER
26	WASHER
27	LEAF SPRING ASSY
28	SET SCREW
29	SPOOL METAL
30	WASHER
31	BAIL ASSY
32	BUSH
33	LINE ROLLER
34	BALL BEARING
35	RING
36	BUSH

KEY NO	PARTS NAME
37	ARM LEVER
38	TORX SCREW
39	TAP SCREW
40	ROTOR COVER -B
41	TAP SCREW
42	TAP SCREW
43	ROTOR COVER -A
44	TAP SCREW
45	LINK
46	COIL SPRING
47	KICK LEVER
48	TAP SCREW
49	LOCK CAP
50	WATERTIGHT WASHER
51	NUT
52	ROTOR
53	SCREW
54	PLATE
55	WATERTIGHT WASHER
56	CAP
57	ROTOR BRAKE
58	COLLAR
59	BALL BEARING
60	BEARING HOLDER
61	ONE WAY CLUTCH
62	SLEEVE
63	PINION
64	BUSH
65	MAIN SHAFT
66	PILLAR
67	HANDLE CAP
68	BODY ASSY
69	O/S SLIDER
70	O/S GEAR
71	REAR CAP
72	SCREW

KEY NO	PARTS NAME
73	BALL BEARING
74	TAP SCREW
75	O-RING
76	TAP SCREW
77	BALL BEARING
78	DRIVE GEAR
79	WASHER
80	WASHER
81	BALL BEARING
82	BODY COVER ASSY
83	TAP SCREW
85	WATERTIGHT WASHER
86	HANDLE ARM ASSY
87	BUSH
88	HANDLE KNOB
89	BUSH
90	SCREW
91	HANDLE KNOB CAP ASSY
92	DRAG KNOB ASSY
93	SPOOL ASSY
94	HANDLE ASSY
102	WASHER

SPEAKY 3500HGX	
17	SPOOL
31	BAIL ASSY
47	KICK LEVER
52	ROTOR
93	SPOOL ASSY
95	HANDLE ASSY
96	HANDLE ARM ASSY
97	BUSH
98	HANDLE KNOB ASSY
99	WASHER
100	SCREW
101	HANDLE KNOB CAP