



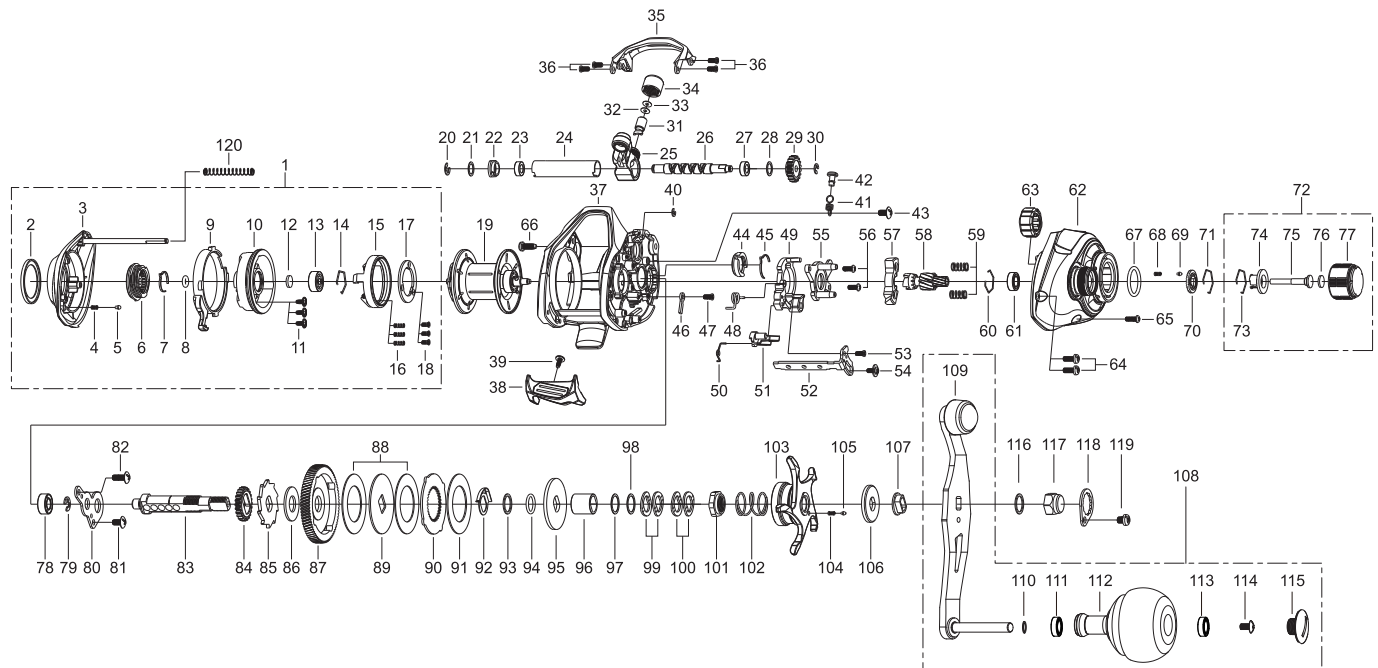

KEY NO	Parts Name	KEY NO	Parts Name	KEY NO	Parts Name
1	①Palm Side Cover Unit	41	Coil Spring	81	Screw
2	Palm Side Cover Cap Assembly	42	Line Holder	82	Screw
3	Palm Side Cover	43	Screw	83	Gear Metal
4	Coil Spring	44	Line Memory Knob	84	Gear
5	Pin	45	Click Spring	85	Ratchet
6	Control Dial	46	Kick Lever Plate	86	Washer
7	Click Spring	47	Screw	87	Drive Gear
8	O-Ring	48	Spring	88	Drag Disc-A
9	Lock Lever	49	Clutch Cam	89	Drag D Washer
10	Spool Cover	50	Spring	90	Washer-A
11	Tap Screw	51	Kick Lever	91	Drag Disc-A
12	Washer	52	Clutch Link	92	Click Spring
13	Ball Bearing	53	Tap Screw	93	Washer
14	Ring	54	Screw	94	O-Ring
15	Slide Cam Assembly	55	Clutch Cam Plate	95	Washer-D
16	Coil Spring	56	Screw	96	Sleeve
17	Slide Cam Plate	57	Clutch	97	Washer
18	Screw	58	Pinion	98	Washer
19	Spool Assembly (1 Ball Bearing)	59	Coil Spring	99	Spring Washer
20	Retainer	60	Ring	100	Spring Washer
21	Washer	61	Ball Bearing	101	Drag Nut
22	Bush	62	②G/Side Cover Assembly	102	Coil Spring
23	Bush	63	One Way Clutch	103	Star Drag Assembly
24	Pipe	64	Screw	104	Coil Spring
25	Level Wind Assembly	65	Screw	105	Click Pin
26	Worm Shaft	66	Tap Screw	106	Click Plate
27	Bush	67	O-Ring	107	Adaptor
28	Washer	68	Coil Spring	108	④Handle Assembly
29	Worm Pinion	69	Click Pin	109	Handle Arm Assembly
30	Retainer	70	Click Plate	110	Washer
31	Level Wind Pin	71	Retainer	111	Bush
32	Washer	72	③Tension Knob Assembly	112	Handle Knob Assembly
33	Washer	73	Ring	113	Bush
34	Nut	74	Control Plate	114	Screw
35	Front Support	75	Tension Shaft	115	Handle Knob Cap
36	Screw	76	Washer	116	Washer
37	Frame	77	Tension Knob	117	Nut
38	Thumb Bar Assembly	78	Ball Bearing	118	Retainer
39	Tap Screw	79	Retainer	119	Screw
40	Retainer	80	Bearing Plate	120	Coil Spring

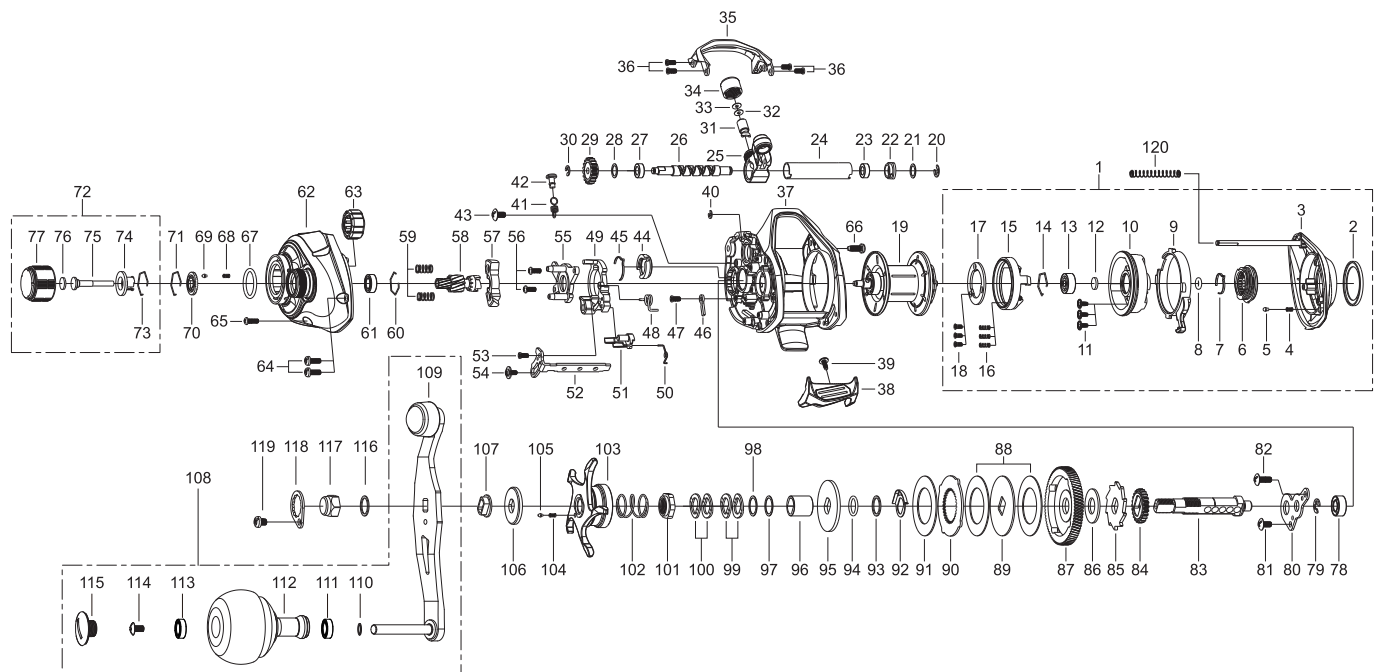

KEY NO	Parts Name	KEY NO	Parts Name	KEY NO	Parts Name
1	①Palm Side Cover Unit	41	Coil Spring	81	Screw
2	Palm Side Cover Cap Assembly	42	Line Holder	82	Screw
3	Palm Side Cover	43	Screw	83	Gear Metal
4	Coil Spring	44	Line Memory Knob	84	Gear
5	Pin	45	Click Spring	85	Ratchet
6	Control Dial	46	Kick Lever Plate	86	Washer
7	Click Spring	47	Screw	87	Drive Gear
8	O-Ring	48	Spring	88	Drag Disc-A
9	Lock Lever	49	Clutch Cam	89	Drag D Washer
10	Spool Cover	50	Spring	90	Washer-A
11	Tap Screw	51	Kick Lever	91	Drag Disc-A
12	Washer	52	Clutch Link	92	Click Spring
13	Ball Bearing	53	Tap Screw	93	Washer
14	Ring	54	Screw	94	O-Ring
15	Slide Cam Assembly	55	Clutch Cam Plate	95	Washer-D
16	Coil Spring	56	Screw	96	Sleeve
17	Slide Cam Plate	57	Clutch	97	Washer
18	Screw	58	Pinion	98	Washer
19	Spool Assembly (1 Ball Bearing)	59	Coil Spring	99	Spring Washer
20	Retainer	60	Ring	100	Spring Washer
21	Washer	61	Ball Bearing	101	Drag Nut
22	Bush	62	②G/Side Cover Assembly	102	Coil Spring
23	Bush	63	One Way Clutch	103	Star Drag Assembly
24	Pipe	64	Screw	104	Coil Spring
25	Level Wind Assembly	65	Screw	105	Click Pin
26	Worm Shaft	66	Tap Screw	106	Click Plate
27	Bush	67	O-Ring	107	Adaptor
28	Washer	68	Coil Spring	108	④Handle Assembly
29	Worm Pinion	69	Click Pin	109	Handle Arm Assembly
30	Retainer	70	Click Plate	110	Washer
31	Level Wind Pin	71	Retainer	111	Bush
32	Washer	72	③Tension Knob Assembly	112	Handle Knob Assembly
33	Washer	73	Ring	113	Bush
34	Nut	74	Control Plate	114	Screw
35	Front Support	75	Tension Shaft	115	Handle Knob Cap
36	Screw	76	Washer	116	Washer
37	Frame	77	Tension Knob	117	Nut
38	Thumb Bar Assembly	78	Ball Bearing	118	Retainer
39	Tap Screw	79	Retainer	119	Screw
40	Retainer	80	Bearing Plate	120	Coil Spring